## barcelona cosmetic bag





Find the matching Barcelona handbag pattern at www.cozynestdesign.com

Print instructions using "landscape" setting on printer.

This is a quick and easy project to give as a gift to a friend or to yourself! The large size promises lots of room for all types of necessary items. Styled with grommets on vinyl or faux leather accent panels for a little bit of edgy attitude!

# **Finished sizes** 9W x 7H x 1" D

Makes one cosmetic bag

Traines one cosmette sug				
Notions and Equipment				
• 2 - 7/16" grommets	Basic sewing equipment			
• 1 - 9" zipper	Polyester thread (preferred)			
• 25" - 8/32" piping cording*	Heavy weight needle			
• 25" - packaged 1/2" double fold bias tape for piping*	Non-stick or roller presser foot (optional)			
• 20" ribbon, cording or 1/2" double fold bias tape or twill tape (for lacing)	Piping presser foot (optional)			

<sup>\*</sup>This design uses prepackaged bias tape for piping. For instructions on making your own bias strips for piping, visit www.cozynestdesign.com.

#### **Fabrics**

Fabric #1: Fat quarter, 1/4 yard (44" wide) or large scraps - for main exterior and lining

Suggested fabrics: cotton, home decor, canvas or denim

Fabric #2: 1/8 yard (54" wide) or scraps - for exterior accents Suggested fabrics: marine vinyl, faux leather or suede or other non-fraying fabric

Medium -weight fusible interfacing - 20x 7" piece or 1/4 yard (20" wide)


Copyright 2013. S. Gido. All Rights Reserved. This pattern is for personal use only. No portion may be used for commercial purposes unless written permission is received. No portion of this pattern or design may be reproduced without expressed permission. This includes mechanically, electronically, or by any other means, including photocopying.

#### NOTES

- Use 1/2" seam allowance unless otherwise indicated
- Fabric panels and interfacing will be treated as one unit. Interfacing is not shown in illustrations.

### Tips on sewing on vinyl or faux leather

- Pins can leave visible holes in fabric. Test on small scrap to see how the fabric reacts to pin holes; some fabrics may heal. Pin minimally or pin in seam allowance only. Clips or painters tape are good alternatives to using pins.
- Select a longer stitch length than usual I used 3.5 for construction and 4.0 for topstitching.
  - If presser foot sticks to fabric while sewing: Use a non-stick or roller presser foot
  - Apply tape to underside of presser foot
  - Rub a small amount of sewing machine oil to underside of presser foot

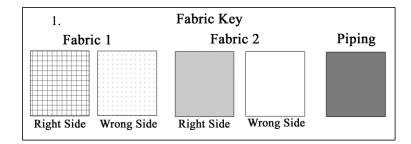


CUTTING CHART (W x H)	Fabric 1	Fabric 2	Medium-weight Interfacing
A. Main Exterior	Cut 2 @ 10 x 8 1/2"	-	2 @ 10x 8 1/2"
B. Exterior accents	-	2 from pattern #3	-
C. Lining	2 @ 10 x 8 1/4"	-	-

- Interface both A pieces on WRONG side following manufacturer's instructions.
- Designate one A piece as "Front" and the other as "Back".
- Transfer grommet placement mark from pattern piece #3 to WRONG side of **B** panels.


1) Cut a 1 x 1 1/2" piece from Fabric #1. Fold in half to 1 x 3/4". Position on zipper tape above top zipper stop so folded end is facing toward zipper. Edge stitch along folded edge and side edges. Trim to width of zipper.




L 1 1/2"





- Cut 2 11 1/2" pieces of piping. Remove a few stitches from fabric at ends of piping. Pull back fabric to reveal cording. Cut 5/8" of cord from each end. Position piping on **B** so that piping flange is at WRONG side, and piping cord butts up to fabric around curve. Notch piping flange around curve. Topstitch using 1/8" seam allowance with zipper foot.
- Center grommets over placement marks on I panel and install following manufacturer's instructions.
- 4) Lay **B** panels RIGHT side up on RIGHT side of **A**-Front, 1 1/2" from TOP edge. Baste using a 1/4" seam allowance.






- Front, along top edge. Sew along top next to **zipper teeth using a** zipper foot.
- 6) Lay C RIGHT side down on RIGHT side of A-**FRONT,** sandwiching zipper between **A & C**. Align long, top edges. Sew using a 1/8" seam allowance.







- 7) Bring A & C WRONG sides together to expose zipper; press seam. Topstitch along zipper using a 1/4" seam allowance.
- 8) Repeat steps #5-6 to attach **A-Back &** second **C** panel to free edge of zipper.



Open the zipper half way. With RIGHT sides together, align bottom and side edges of both A panels. Fold seam allowances toward C. Sew side and bottom edges, including seam allowance.


10) Flatten corners of **A** so that the side and bottom seam lines are aligned and in the center (look inside bag; match up side and bottom seams). Open seam allowances; pin.





11) Measure 1/2" down from the tip of the point. Draw a horizontal line. Stitch along line. Backstitch to reinforce.

12) Trim off point 1/4" from seam line.




С А

13) Align all edges of both **C** panels. Sew sides and bottom edges, leaving a gap in seam line at center of the long edge for turning.

14) Repeat steps #10-12 to square corners of C panels.

15) Trim seam allowances on both ends of zipper tape to 1/8". Turn bag RIGHT side out through opening in C. Tuck seam allowance of opening to the inside. Slip stitch or topstitch opening using a 1/8" seam allowance. Arrange C inside of exterior bag; press. Open zipper and topstitch 1/8" from top edge (optional). Cut a 20" piece of ribbon, cord or twill tape. Lace through grommets tie with a bow.



I hope you have fun with this project! Thanks so much! Sarah

Show off what you've made with your Cozy Nest pattern! Post your pictures to my Facebook wall or email them to cozynestinfo@cox.net and I'll display them on Flickr and Facebook for you!





For more sewing patterns, tutorials and freebies go to www.cozynestdesign.com!











1" square when printed correctly

